


SECURITY HANDHELD METAL DETECTOR

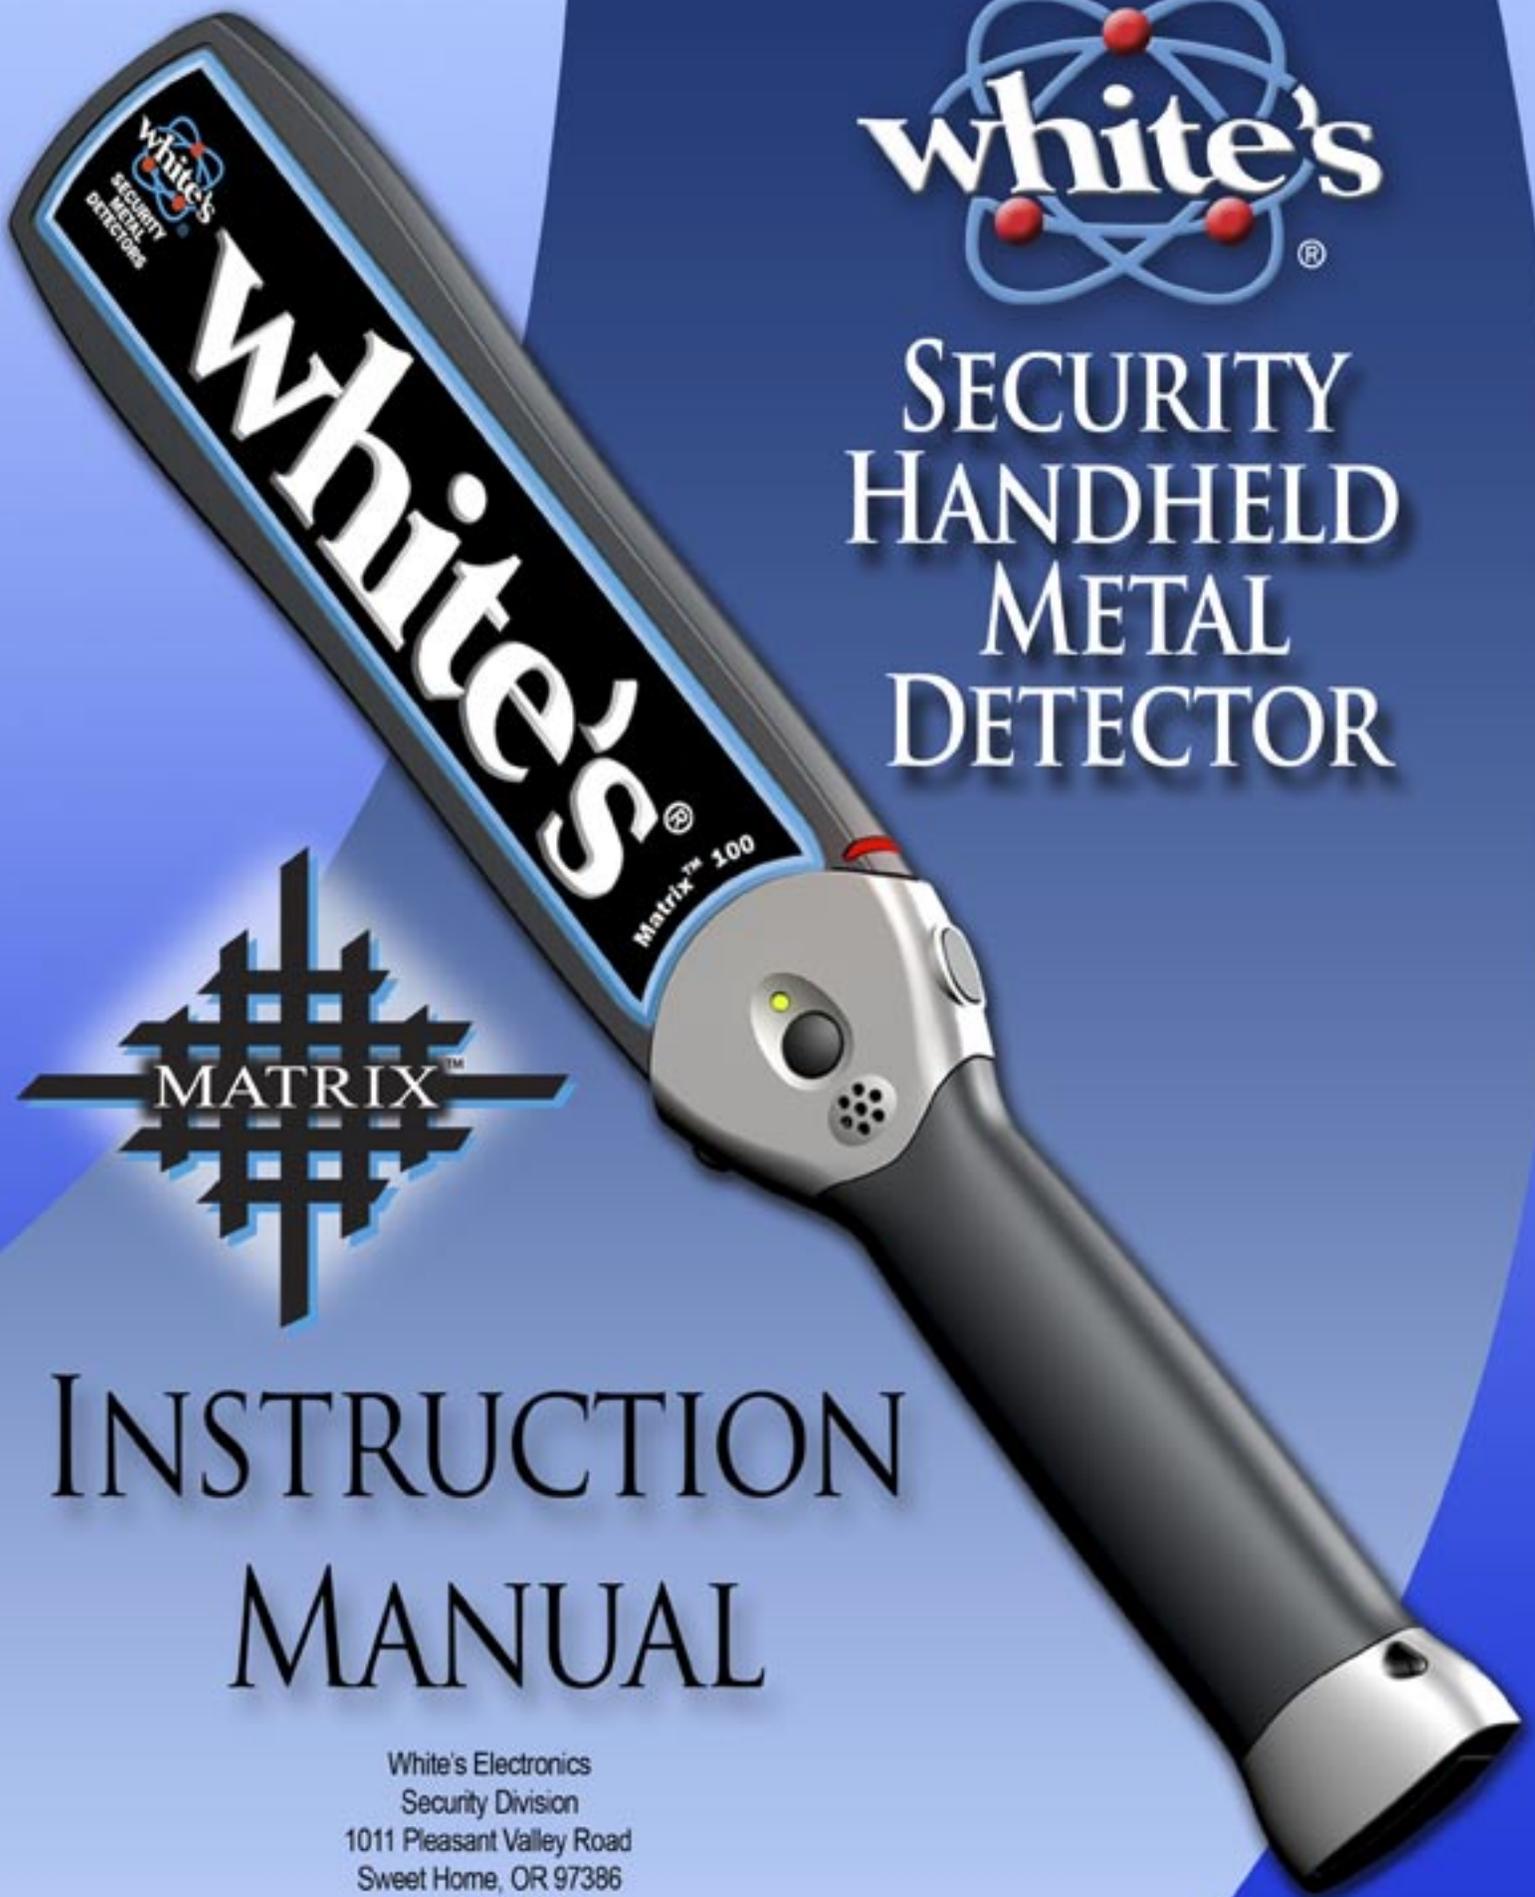

INSTRUCTION MANUAL

White's Electronics
Security Division
1011 Pleasant Valley Road
Sweet Home, OR 97386
1-888-778-9010
www.whiteselectronics.com

Introduction

The Matrix 100 Handheld Metal Detector is a world class security scanner. It is designed to meet and exceed the needs and specifications of today's security conscious world, and complies with all National Institute of Justice standards for indoor/outdoor operations (IP 54). "Made in the U.S.A." is a hallmark of White's Electronics, the Matrix 100 utilizes the latest in electronic design technology that is both functional and attractive.

The Matrix 100 Handheld Metal Detector is designed to detect metal and is primarily for security applications, however it is useful for a myriad of detection applications.


Table of Contents

Matrix 100 Features


Front-View	4
Back-View	5
Top Edge	6
Bottom Edge.....	6
Mechanical Drawing-metric Dimensions	6
Battery Door.....	7
ON/OFF Button.....	8
Sensitivity Control	9
Volume Control for Earbud	10
Testing the Scanner	10
Batteries	11
Battery Installation	12
De-sense Button	13
Earbud Jack.....	14
Earbud Jack Rubber Plug.....	14
Lanyard	15
Scanning	15
Three-year Warranty.....	19
Specifications	20
Accessories.....	21




Features—Front View

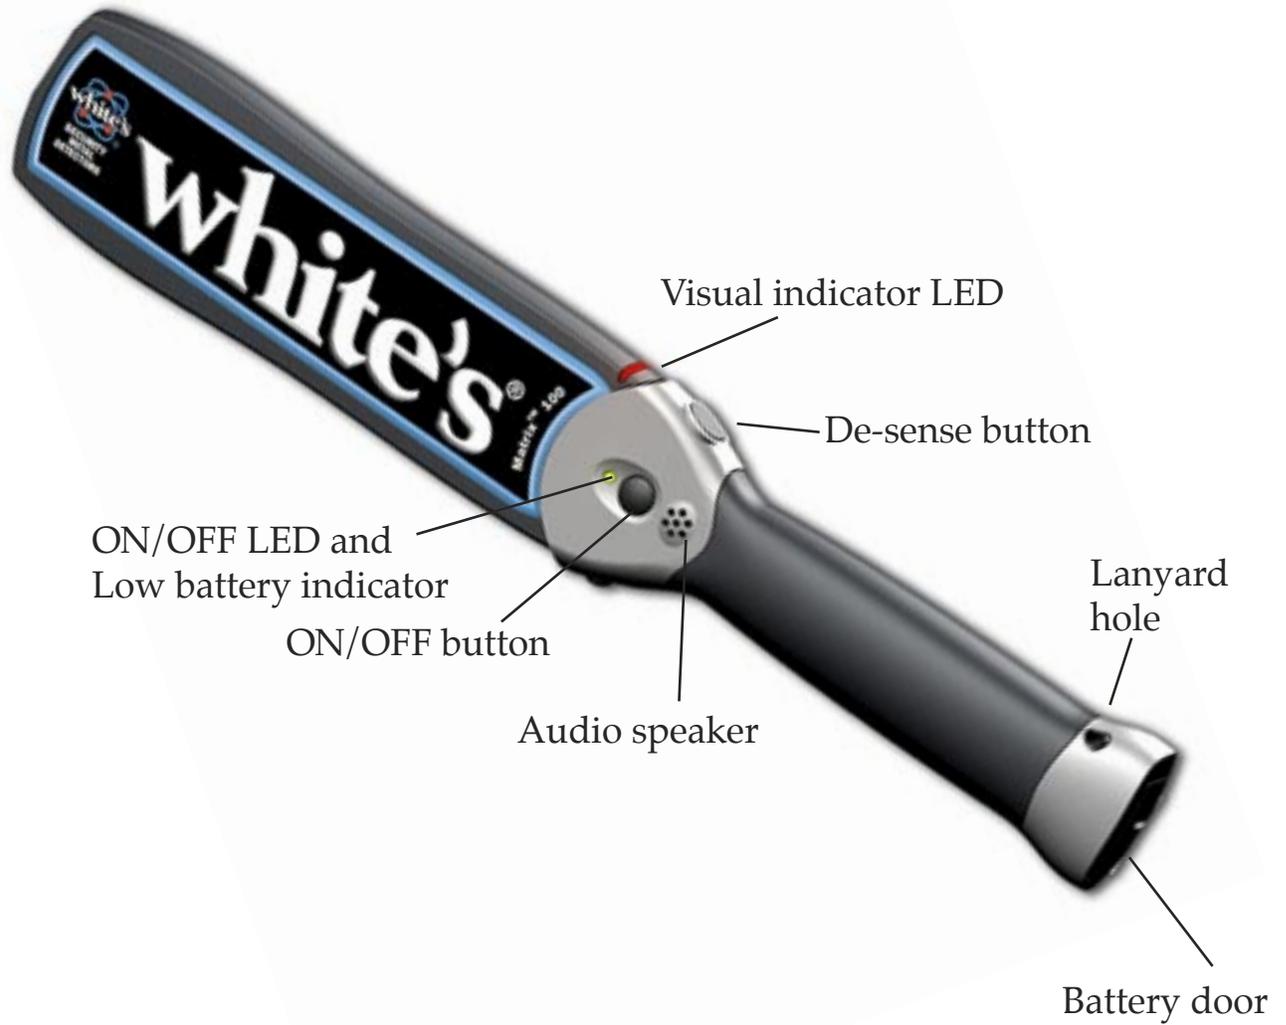


Features—Back View

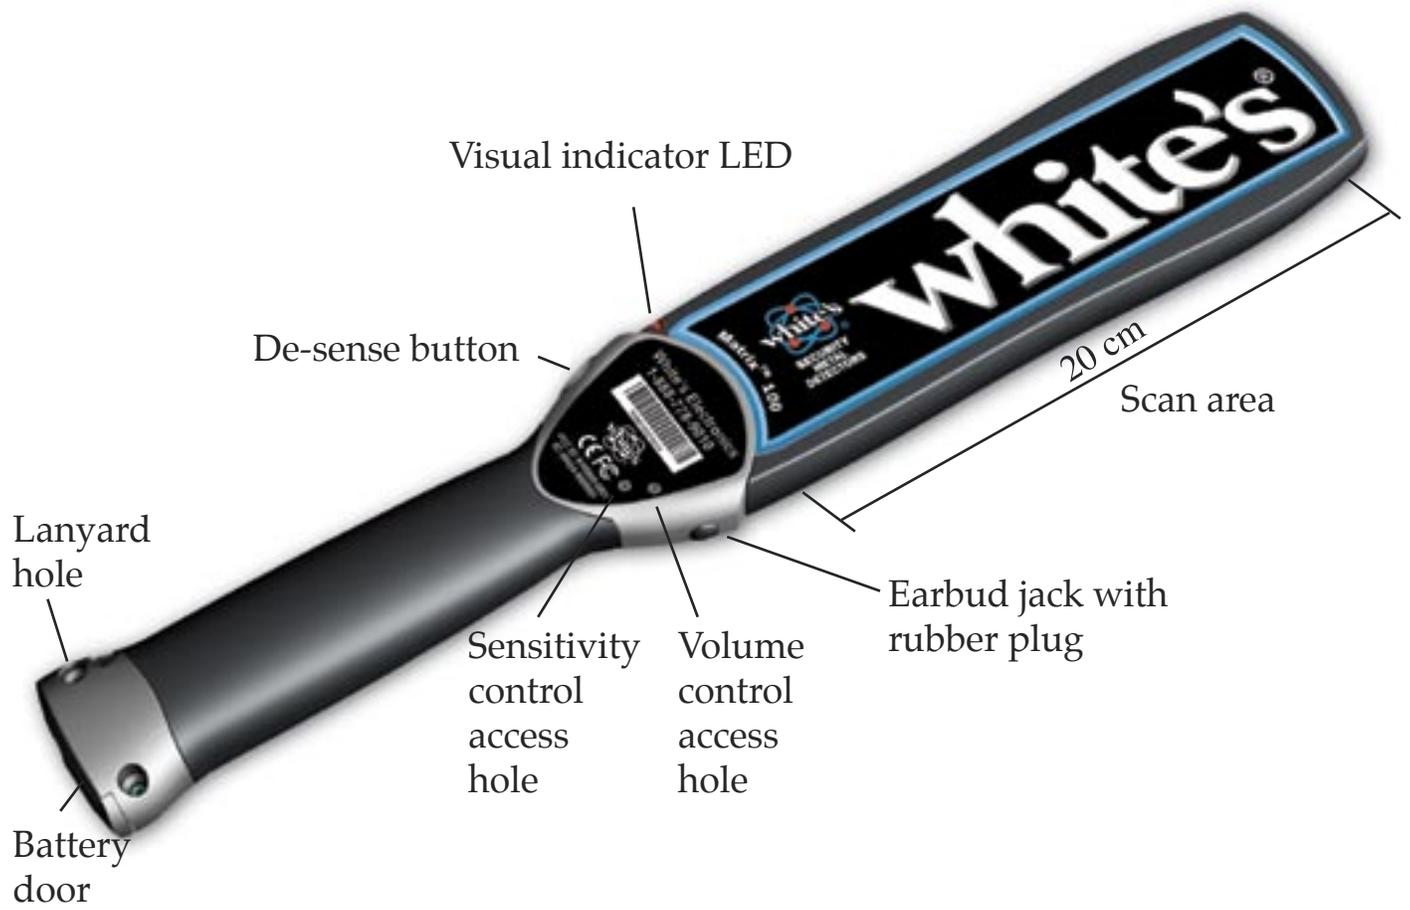


Features—Top Edge

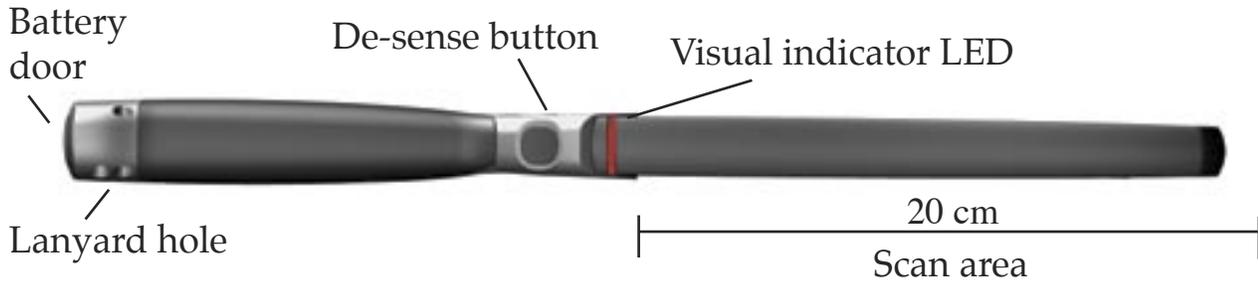

Features—Bottom Edge


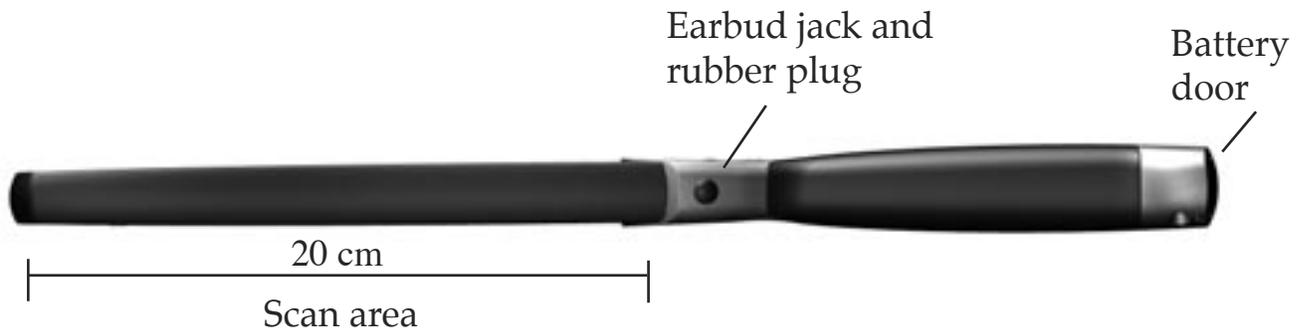


Mechanical Drawing-metric Dimensions

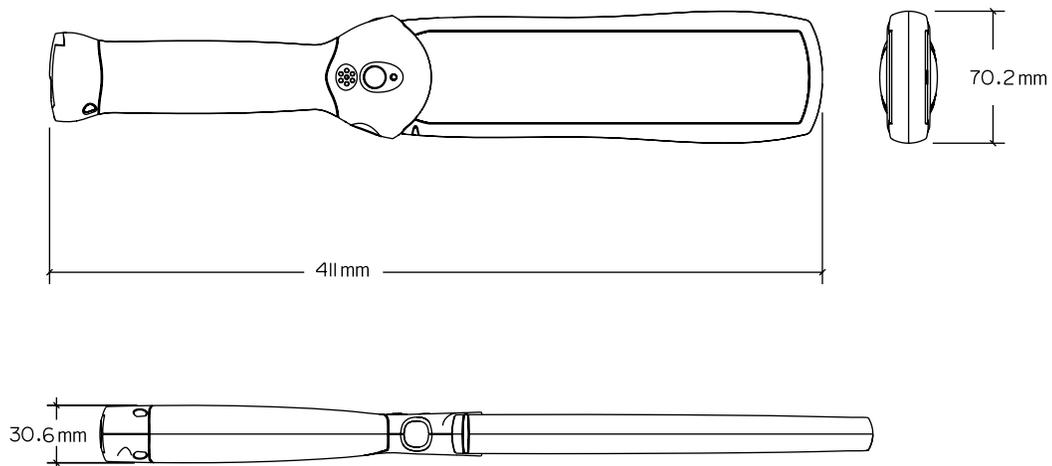

SCALE 1:4.16

Features—Battery Door

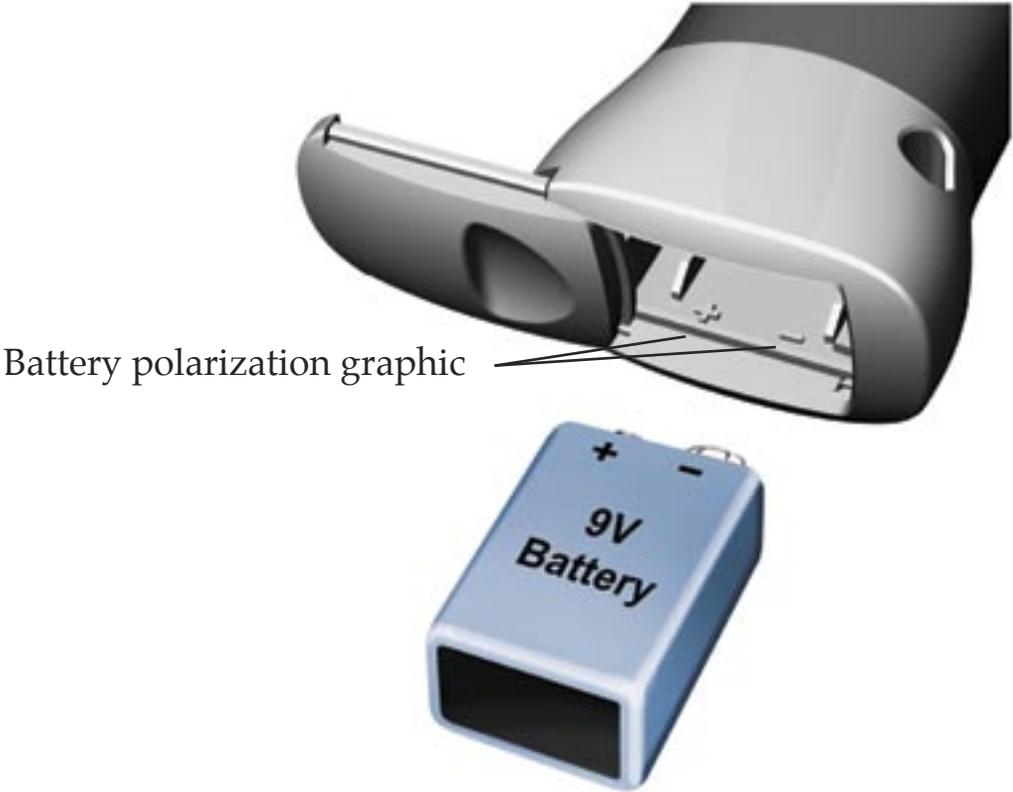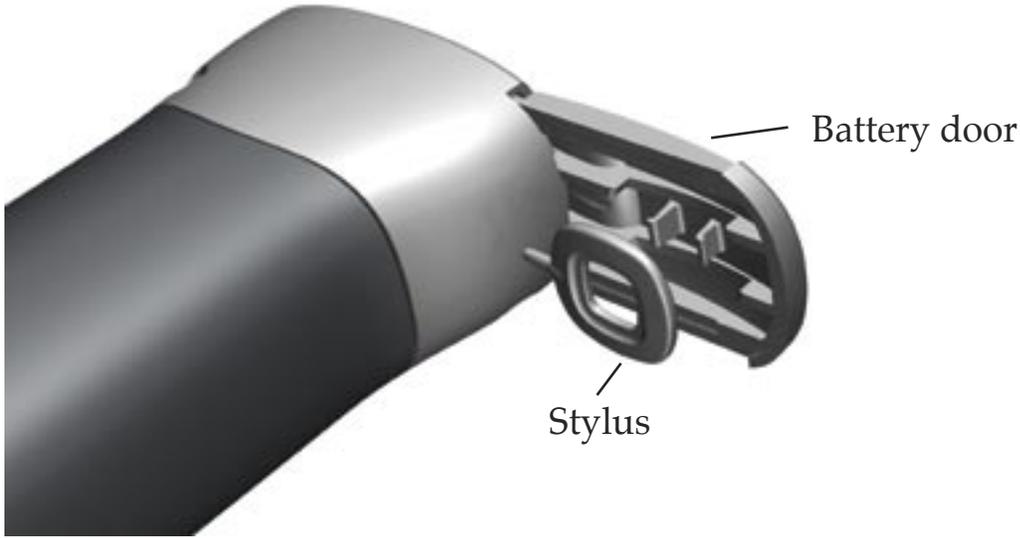

ON/OFF Button


There are three selections for the ON/OFF button:

- ON Audio
- ON Vibrate
- OFF

ON Audio—press the ON/OFF button once. This will be followed by a single, double, or triple beep to indicate the current sensitivity level setting. The green ON indicator LED will emit a single flash for low sensitivity, double flash for medium sensitivity or a triple flash for high sensitivity.

ON Vibrate—press the ON/OFF button twice. This will be followed by a single vibration burst and the ON indicator LED will emit a single flash for low sensitivity, double flash for medium sensitivity, or a triple flash for high sensitivity. The audio alarm is deactivated when the vibrate alarm is activated.

OFF—Turn the unit off by pressing the ON/OFF button once. The ON indicator LED will disappear.

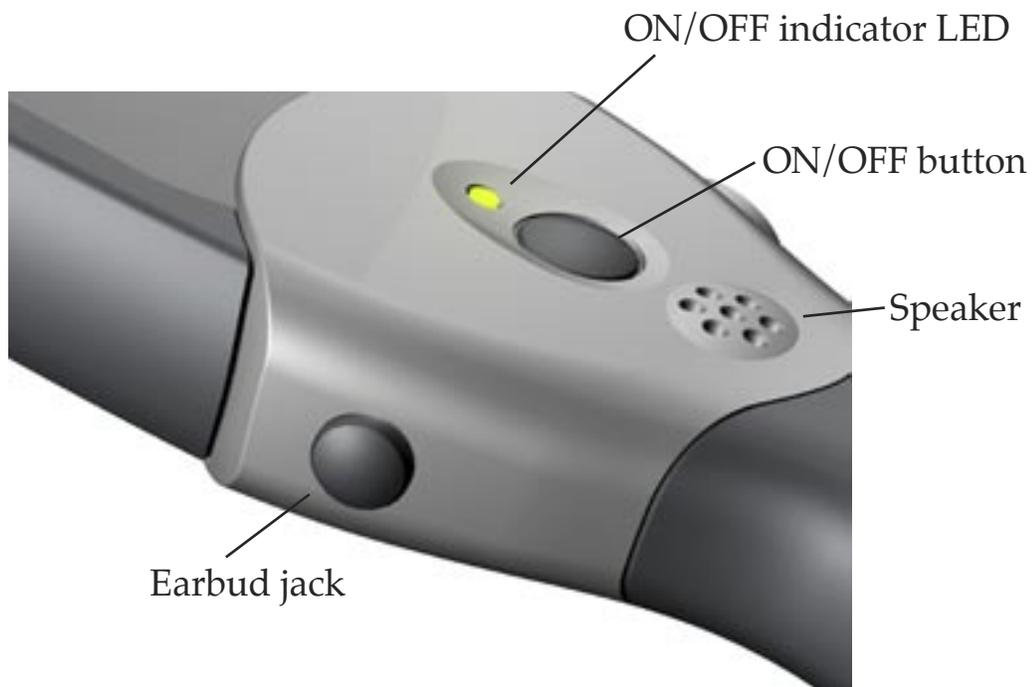

Sensitivity Control

The unit is preset, at the factory, to medium sensitivity. The sensitivity level can be changed to the low, medium, or high level.* The Specifications List (see Page 20) shows the effect of the different sensitivity levels for detecting objects of various sizes.

To change the sensitivity level, open the battery door and remove the stylus (see Page 7). Use the stylus to press the sensitivity control to cycle through the sensitivity levels,(low, medium, or high). The unit will beep or vibrate and will flash the red visual indicator LED to announce the new sensitivity level:

One beep/vibration/flash = low sensitivity

Two beeps/vibrations/flashes = medium sensitivity

Three beeps/vibrations/flashes = high sensitivity

When the unit is turned off or the battery is removed, the sensitivity level setting is retained in the memory.



* To be determined by administration policy and supervisor control.

Volume Control for the Earbud

The unit is preset, at the factory, to medium earbud volume. Adjustments to volume must be made in audio mode. Press the volume control to cycle through the volume levels of low, medium, or high.* The unit will beep or vibrate and will flash the red visual indicator LED to announce the new volume level:

One beep/one flash = low volume

Two beeps/two flashes = medium volume

Three beeps/three flashes = high volume

When the earbud is plugged into the scanner, the audio speaker is deactivated. When the unit is turned off or the battery is removed, the ear bud volume level setting is retained in the memory.



* To be determined by administration policy and supervisor control.

Testing the Scanner

- Turn on the scanner in the "ON Audio" or "ON Vibrate" mode.
- Pass the scanner over a metal test object to ensure the LED, audio alarm, or the vibrate alarm are functioning properly. If the battery is fresh or recently recharged (more than 7V), the LED next to the ON/OFF button will produce a green light (see Page 8). If the battery is discharged to less than 7V, the LED will produce a yellow light and it is recommended that you replace the battery.

Batteries

One 9V battery is included with the Matrix 100. Use a 9V-alkaline, 9V-lithium-manganese dioxide, or externally charged 9V-battery. If the battery is fresh or recently recharged (more than 7V), the LED next to the ON/OFF button will produce a green light. If the battery is discharged (less than 7V) the LED will flash a yellow light and it is recommended that you replace the battery.

Battery Life

Based upon measurements, battery life for a 600 mA-hour alkaline battery at room temperature is:

	Hours	Days
ON	216	9
OFF	2880	120

Battery life is doubled with the 1200 mA-hour lithium-manganese dioxide batteries.

Rechargeable 9V batteries can also be used, but battery life per charge is typically much shorter than the life of 9V-alkaline batteries, and depends upon the battery type and the battery recharging system.

WARNING

DO NOT use the earbud jack as a recharging port! Use of the earbud jack as a recharging port may damage the Matrix 100 or the battery charger, and will void the warranty.

Battery Temperature Ratings

Alkaline batteries are rated by the following manufacturer:

Energizer -18°C to 55°C (0°F to 130°F)

Panasonic -20°C to 54°C (-4°F to 130°F)

Lithium-manganese dioxide batteries are rated by the following manufacturer:

Duracell -20°C to 60°C (-4°F to 140°F)

Energizer -40°C to 60°C (-40°F to 140°F)

Ultralife -20°C to 60°C (-4°F to 140°F)

Manufacturer's ratings are based upon operating loads quite different from the Matrix 100, so it is possible to have different results.

* For information about special batteries that will operate at temperatures as low as -40°C contact White's Electronics, Inc.

Battery Installation

- Gently slide the battery door open.
- Slide a 9V battery into the battery cavity as shown below.
- Close the battery door.



De-Sense button

On the top edge of the scanner, there is a large rubber “De-sense” button. When depressed, this button will reduce the detectors sensitivity by approximately 50%. This is particularly useful when scanning near rebar reinforced floors. The “De-sense” is only activated as long as the button is depressed. While the “De-sense” button is pressed the ON/OFF LED (see Page 4) will illuminate continuously. If the battery is good, the LED will be green. If the battery is low or defective the LED will be yellow.

Visual indicator LED

De-sense button



Earbud jack

The earbud jack accepts a 3mm or 1/8" "Mono" connector.



Earbud Jack Rubber Plug

The rubber plug helps protect the earbud jack against dirt and moisture.



Lanyard

A lanyard is provided with each Matrix 100. The small nylon loop can be threaded through the lanyard hole and looped back through itself to secure the Matrix 100. The lanyard is tested to withhold approximately 25 pounds of force, before breaking.



Scanning a Person

- **Warning: Follow the approved policy & procedure for scanning a person. This policy & procedure should be approved by the administrator and/or supervisor of the person using the scanner.**
- It is recommended that the operator “NOT” touch the individual being scanned with the detector.
- The detector is not a weapon and should not be treated as such and will void the warranty.
- Treat the detector with care. Do not abuse.

National Institute of Justice Guidelines for use of handheld detectors in schools.

While it is not difficult to learn to use a handheld metal detector correctly, school administrators should not underestimate the value of annual training for their operators, as well as training for staff who may be called upon to serve as backup or supplemental operators. However, on-the-job practice is important in allowing the school to achieve the type of throughput that will be required in order to process students quickly.

Every school will want to tailor its own set of operator procedures to take into consideration its students’ and community needs. Some generic procedures:

- The detector should be passed over the scannee’s body at a distance of no more than 3 to 4 inches. Avoid touching the body or clothing with the detector. However, for some baggier clothing, such as pants or jackets, it may be necessary to hold the detector against or more into the fabric while scanning in order to stay within 3 to 4 inches of all body surfaces.

Scanning a Person

- Most handheld metal detectors should be set at their highest sensitivity; an exception to this is if there is significant interference from metal reinforcing in a floor or other nearby material that could cause constant alarms unless the detector's sensitivity is turned down.

- The body scan should be performed each time in the same pattern so that the operator always knows what parts of the body still need scanning. A sample routine is illustrated on Page 18.

1. Ask the scannee to place all carried items, plus any caps or headgear on a table (procedures for manual search of baggage are not covered in this text). The scannee should stand with his or her feet about 18 inches apart, facing away from the table and about 2 feet in front of it. Footprints outlined on the floor or drawn on a mat can greatly help position the scannee properly. Ask the scannee to hold his or her arms out to the sides, parallel to the floor.

2. Quickly run the handheld detector across some piece of conductive material on your own body, such as a belt buckle. The ensuing squeal of the detector will assure you that the scanner is still operating properly.

3. Start at the top of one shoulder of the scannee. With the paddle of the detector held horizontally and parallel to the front of the body, sweep down one side of the front of the torso, down the leg to the ankle, then move to the other ankle and sweep back up the front of this opposite leg and torso, ending with the opposite shoulder. (If a particular detector's detection paddle is less than half the width of the average body, or if a particular body is wider than twice the width of the detection paddle, the pattern will have to be modified to achieve adequate coverage).

4. Sweep the detector paddle over the outside top of the arm from the top of the shoulder to the bottom of the wrist, then up the inside of the arm to the armpit. Sweep down that side of the body to the ankle, then up the inside of that leg and down the inside of the opposite leg, then back up the other leg from the ankle to the underarm. Repeat the sweep of the inside and outside of this arm. Note that it would be particularly important to avoid touching the paddle up against the scannee's body when scanning up and down between the legs.

5. Ask the scannee to turn around. (Arms can be put down now). The pattern used to scan the front of the body should now be repeated over the back of the body.

6. Ask the scannee to grab the edge of the table for support, then to lift one foot up in back of him or herself. Scan across the bottom of the shoe. Repeat for the other foot. The operator should expect to hear a short squeal from the detector when scanning the bottom of shoes or boots with steel shanks or steel toes. Both shoes should cause equivalent squeals.

7. For the head area, start at the top of the forehead and scan around the

Scanning a Person

top of the head down to the back of the neck.

- When the detector identifies a suspicious item and there is no visible source for the alarm (clothing is shielding the source object), ask the person to show you what they have in that area. For example, for an alarm along the arm or wrist, have the scannee pull up his or her shirt sleeve. Using your detector, duplicate the squeal you heard before, but now over the visible item.

- Do not let the scannee influence you as to what is actually causing an alarm. For instance, if the detector denotes the presence of a suspicious item under a shirt sleeve, do not fail to completely investigate the source of the alarm even though the scannee assures you that it is just his or her watch.


- If the person you are about to scan caused an alarm when walking through a portal metal detector, and your job is to try to locate the source of that alarm on his or her body, do not stop the complete scanning process just because you come across one alarm-causing item. Continue the scan even though you find one or more items in the process.

- The lower abdominal area is particularly difficult to scan because this area is private in nature and because of the metal items usually found in this area: belt buckles, metal buttons or snaps, and metal zippers. When doing the initial front body scan, if an alarm occurs in this area, there are two possible ways to further investigate:

- a. Ask the scannee to undo any belt he or she might have on and have him or her pull the belt ends away from the middle of the body. Now scan the zipper area; your handheld metal detector should tell you if it is now only sensing a zipper and/or a metal snap, or if a more suspicious item is present and further investigation is needed.

- b. A second approach that some schools use is that, if the lower abdominal area is causing an alarm on the handheld detector, ask the scannee to bend the front of his or her front waistband forward, to ascertain that no weapon is hidden behind it. Facilities need to be available for situations where further investigation can be accomplished privately, but only in the presence of two or more school employees who are the same gender as the scannee.

Scanning a Person

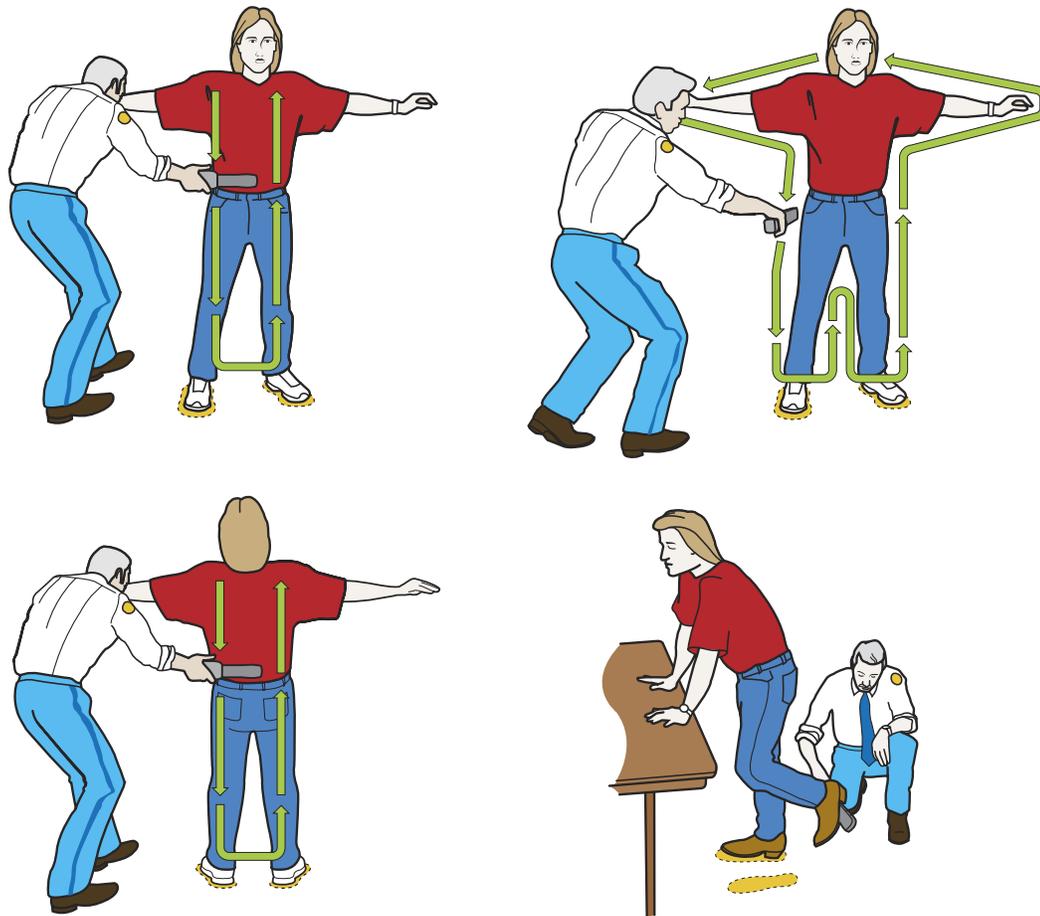

This is an example of procedures for using a handheld metal detector that has at least a 10-inch zone of direction.

(The preceding guidelines and illustrations were produced by the National Institute of Justice in their report titled *The Appropriate and Effective Use of Security Technologies in U.S. Schools*. National Institute of Justice, U.S. Department of Justice: Washington, DC (September 1999) Available online at: <http://www.ojp.usdoj.gov/nij/pubs-sum/178265.htm>)

There have been no conclusive studies showing that the magnetic fields generated by handheld metal detectors will or will not affect personal medical electronic devices (PMEDs), such as pacemakers, cardiac defibrillators, infusion pumps, spinal cord stimulators, etc. Therefore, caution should be used when operating handheld metal detectors near people with the PMEDs.

Three-year Warranty

The Matrix 100 is warranted by White's Electronics, Inc., under normal use, against manufacturing defects for three years from the date of purchase. Equipment returned to an authorized repair center or to the factory during the warranty period will be inspected and evaluated under the performance specifications. White's Electronics will repair or replace, at no charge to the owner, all parts determined to be faulty. Items not covered by this warranty are as follows:

- Batteries
- Failures caused by abuse
- Tampering with the internal electronics
- Battery leakage
- Repairs made by an unauthorized party
- Contaminants
- Use in adverse conditions.

Returns must be prepaid and shipped to:

Whites Electronics, Inc.
Security Division
Repair Department
1011 Pleasant Valley Road
Sweet Home, OR 97386
1-541-367-6121

Specifications

Alarm	Visual indicator LED with audio or vibrate function
Battery Consumption	2.8 mA
Dimensions	
Length	16"/41 cm
Width	2 ¾"/3 cm
Thickness	1.17"/3 cm
Operating frequency	125 kHz
Weight	
With Battery	11.1 oz./316 grams with battery
Without Battery	9.5 oz./269 grams without battery

Specifications List

Requirement	NIJ Specification 0602.03	Matrix 100		
		Sensitivity Level		
		High	Medium	Low
Sensitivity measured from surface of detector to surface of object)				
Large object size class (zinc gun)				
Scan speed 0.5 to 2.0 m/s	8 cm (3.1")	11.6 cm	8.6 cm	5.7 cm
Scan speed 0.1 m/s	5 cm (2")	11.6 cm	8.6 cm	5.7 cm
Medium object size class (steel knife)				
Scan speed 0.5 to 2.0 m/s	6 cm (2.4")	11.5 cm	9.4 cm	6.3 cm
Scan speed 0.1 m/s	5 cm (2")	11.5 cm	9.4 cm	6.3 cm
Medium object size class (aluminum knife)				
Scan speed 0.5 to 2.0 m/s	6 cm (2.4")	7.0 cm	5.3 cm	3.5 cm
Scan speed 0.1 m/s	5 cm (2")	7.0 cm	5.3 cm	3.5 cm
Small object size class (steel handcuff key)				
Scan speed 0.1 to 2.0 m/s	3.5 cm (1.4")	7.3 cm	5.6 cm	3.1 cm
Very small object size class (brass pen refill)				
Scan speed 0.1 to 2.0 m/s	1.5 cm (0.6")	5.2 cm	3.1 cm	1.9 cm
Extremely small object size class (18-gauge stainless hypodermic needle)				
Scan distance and speed	Undefined	1.2 cm	0.2 cm	NA
Large metal panel interference alarm distance	Less than 50 cm (19.7")	43 cm	33 cm	21 cm
Scan area is cylindrical 28 cm long. Diameter is 2x the sensitivity distance for the object class plus 2 cm.				
Scan speed				
All object size classes	0.1 to 2.0 m/s	0.05 to 3.0 m/s		
Scan range				
Large object size class		+/- 10 cm (3.9") at scan speeds from 0.05 to 3.0 m/s for all object size classes		
Scan speed 0.5 to 2.0 m/s	+/- 8 cm (3.1")			
Scan speed 0.1 m/s	+/- 5 cm (2")			
Medium object size class				
Scan speed 0.5 to 2.0 m/s	+/- 7 cm (2.8")			
Scan speed 0.1 m/s	+/- 5 cm (2")			
Small object size class				
Scan speed 0.1 to 2.0 m/s	+/- 5 cm (2")			
Very small object size class				
Scan speed 0.1 to 2.0 m/s	+/- 2 cm (0.8")			
Operating temperature (NIJ indoor/outdoor)		-40°C to +85°C -40°F to +185°F		
Relative humidity	95% 20°C to 60°C	95% 20°C to 60°C		
Audible alarm volume	75 dB at 80 cm	85 dB at 80 cm		
Battery		One 9V		
Battery life	16 hours 19°C to 23°C	9V–Alkaline 215 hours 9V–lithium 430 hours		
Body interference	No alarm when touching hand	No alarm when touching hand		
Electromagnetic emission	CISPR 22, Class B	CISPR 22, Class B		
Weight	Less than 500 g	316 g (11 oz) with battery		
Operating frequency		125 KHz		
Peak magnitude of generated magnetic field at surface of detector		0.2 gauss		

Accessories

Batteries / Chargers

Lithium-manganese dioxide battery (-20°C to +60°C)

9V rechargeable battery

4 Station Charger

10 Station Charger

Earbud

Earbud Jack Plug

Holster

Lanyard

Stylus

Matrix Security Support, Academy, Store,

Security Support	Security Academy	Security Store
FAQs On-line Chat Telephone Email	The Security Academy offers hands-on training instruction at your facility, by our security experts, to train and guide your Security Staff in the most up-to-date security technology available. Prices available on request.	Ballistic Nylon Briefcase Batteries Battery Chargers Caps DVD Earbud Earbud Jack Plug Holster Lanyard Shirts Stylus Sweatshirts Warm-up-suits

Maintenance

Perform daily inspection to ensure the Matrix 100 is operating properly. Inspect the battery to ensure it is “fresh” or charged and that the Matrix 100 is clean.